
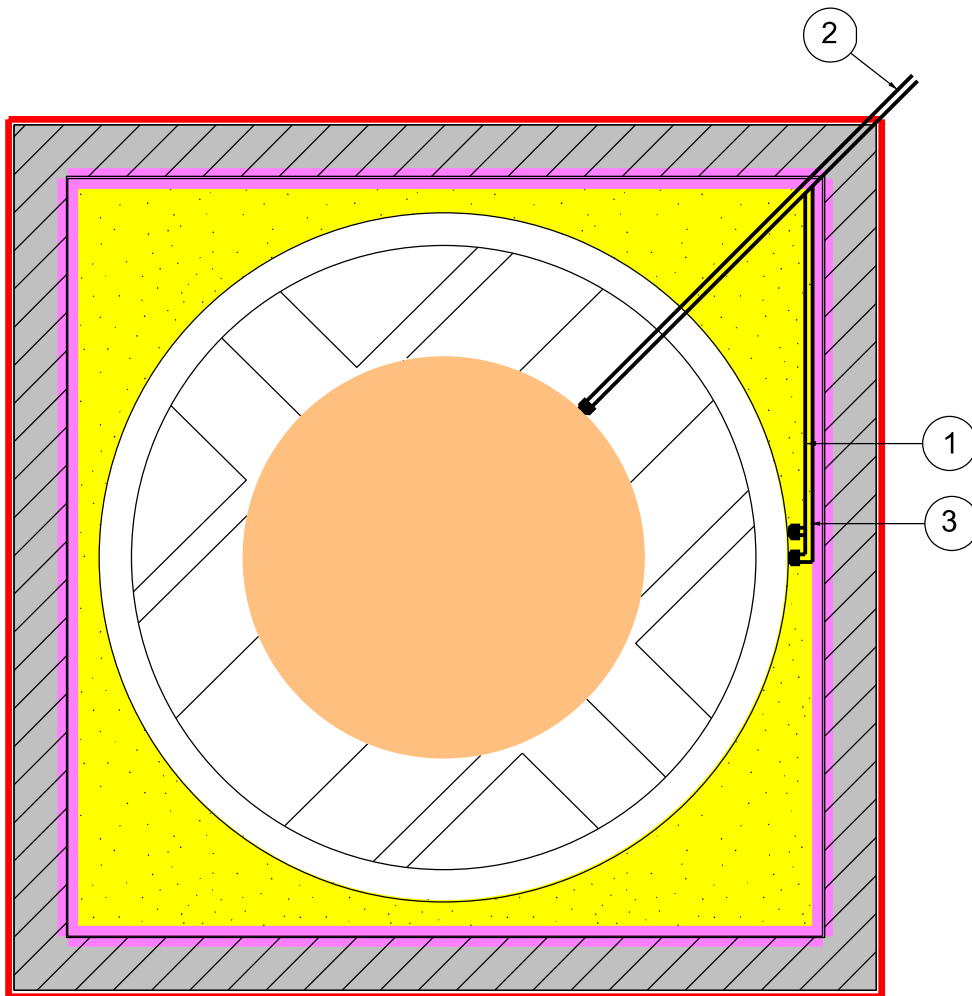


# Winecellar Three Pod (81 bottle) Installation Guidelines

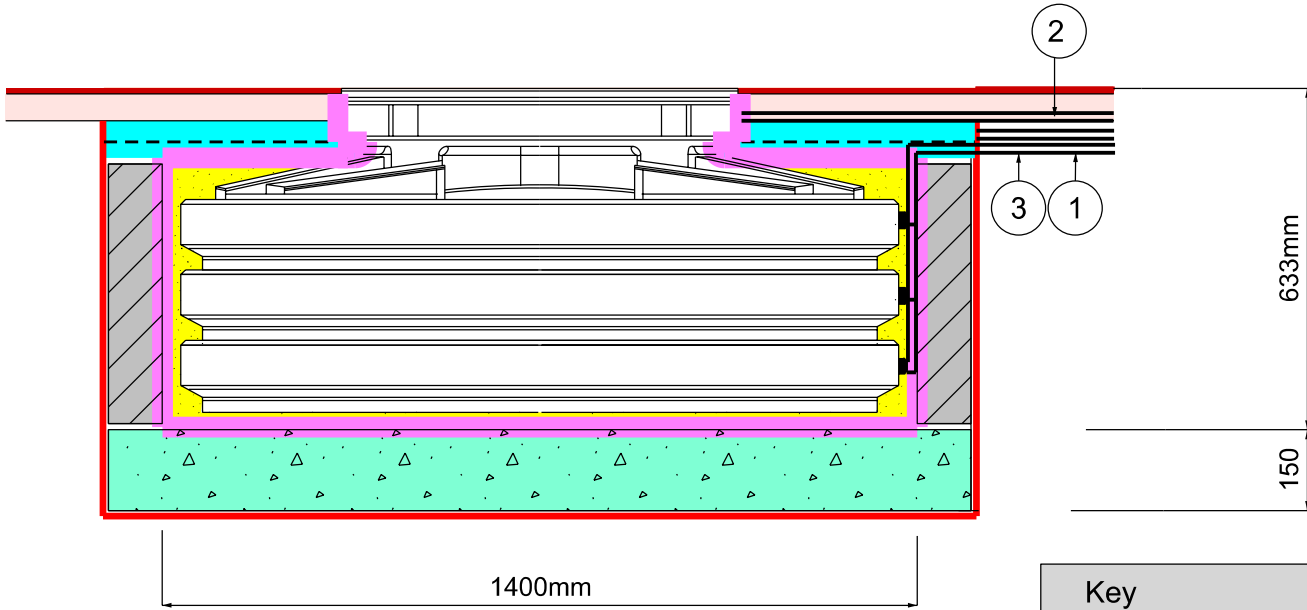

## Key

- Floor Finish
- Floor Screed
- Concrete
- Mesh Reinforcement
- Butyl Bag
- Dry Mix of Sand & Cement
- Blockwork Retaining Wall
- Concrete Base
- D.P.C.

## Polypipe Use

- 1 Airflow outlet to outside wall (air brick)
- 2 Electricity 3m pre-fitted cable to electric point
- 3 Airflow inlet to outside wall (air brick)

## Misc.

- Builders Protective Cover
- 15mm Push-fit Polypipe
- 15mm Polypipe Push Fit Connector